
Column assembly

PFEIFER

3) Grouting the insert area

1) Necessary preparations

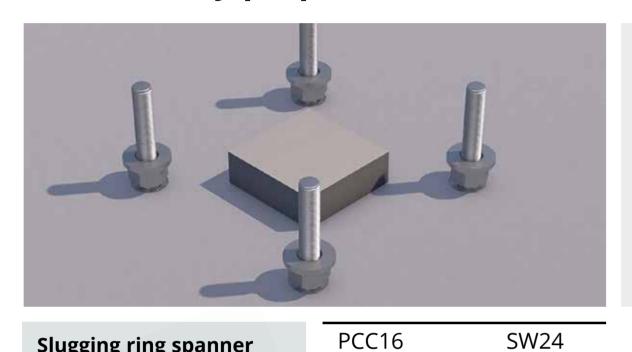

PCC20

PCC24

PCC30-1

PCC30-2


PCC36


PCC39-1


PCC39-2


Height-adjusted nuts and washers – exact alignment must be ensured! Optionally, steel plates can also be used for alignment.

2) Positioning the column

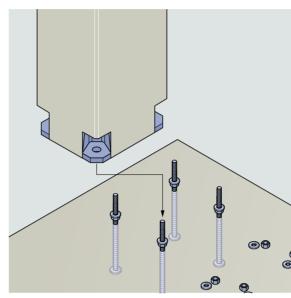

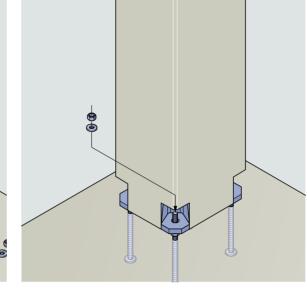


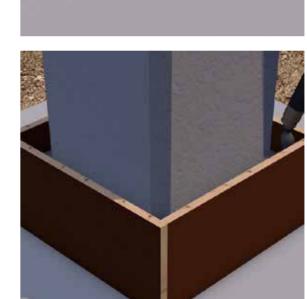





- Largest grain 5 mm
- Non-flammable A1
- Swelling
- Minimum strength higher than column concrete



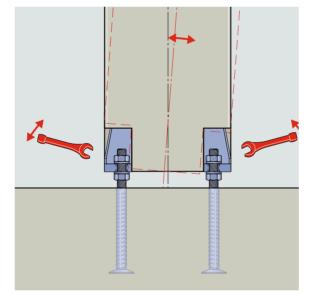



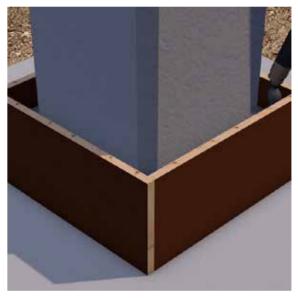

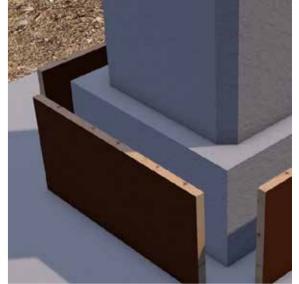

2 kg hammer

Slugging ring spanner

in a suitable size





SW30

SW36


SW46

SW46

SW55

SW60

SW60

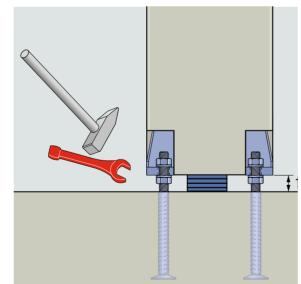

Tighten nuts with an impact wrench – 10 hits with a 2 kg hammer